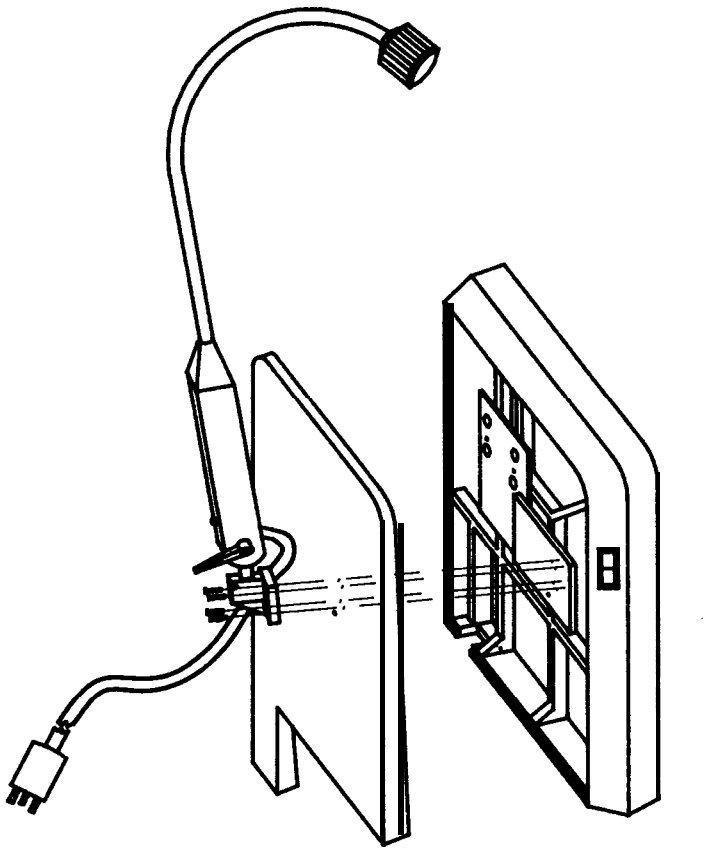

MIDMARK®

INSTRUCTIONS: OPTIONAL EXAM LIGHT

1. REMOVE HEADREST AND BACK PLASTIC.
2. REMOVE THE HEADREST BRACKET AND REPLACE WITH THE BRACKET SUPPLIED WITH THE LIGHT.
3. REPLACE THE BACK PLASTIC.
4. POSITION LIGHT ON BACK SO HOLES LINE UP WITH THE HOLES IN THE BRACKET THROUGH THE PLASTIC.
5. PUT THE SCREWS THROUGH THE LIGHT MOUNT INTO THE BRACKET AS ILLUSTRATED IN THE FIGURE.
6. REPLACE HEADREST.

MIDMARK CORPORATION
VERSAILES, OHIO 45380 937-526-3662
ALL PRODUCTS SUBJECT TO IMPROVEMENT CHANGES WITHOUT NOTICE
003-0459-00 Rev. B (8/98)